

Troubleshooting

Problem	Cause	Solution
Rotary arm not spinning	<ul style="list-style-type: none"> • 1 or more plugged nozzles • Nozzles not aligned with arm • Damaged nozzle or rotary arm 	<ul style="list-style-type: none"> • Clean or replace nozzles • Realign nozzles • Replace damaged part(s)
Leaking water from weep hole	<ul style="list-style-type: none"> • Damaged or worn seals 	<ul style="list-style-type: none"> • Replace rotary head
Leaking water from QC plug	<ul style="list-style-type: none"> • Damaged or missing o-ring in coupler 	<ul style="list-style-type: none"> • Replace o-ring
Unit vibrating while in use	<ul style="list-style-type: none"> • One or more plugged nozzles • Uneven nozzle wear • Damaged nozzle or rotary arm • Miss matched nozzles 	<ul style="list-style-type: none"> • Clean nozzles • Replace damaged part(s) • Replace nozzles

Parts List

- A. BF5004 - brush skirt
- B. BF5001 - rotary head
- C. BF5002 - rotary arm

