


Fault code

1.E01--Overvoltage or low-voltage protection.

DC990K

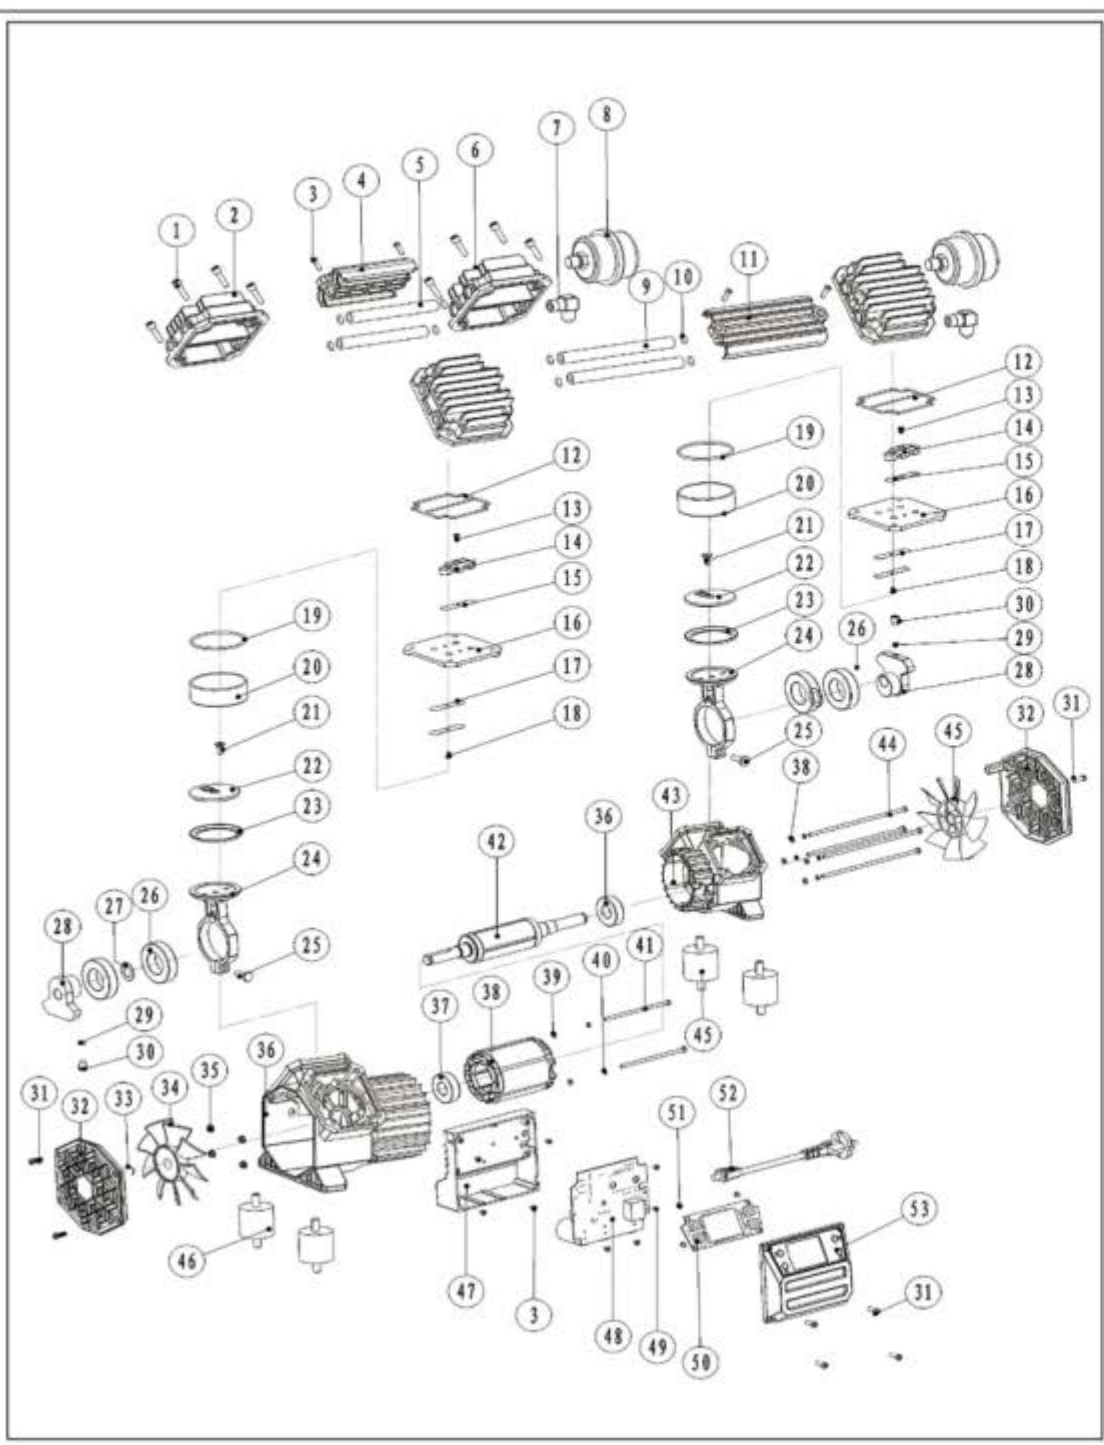

S/N	CODE	Specification	quantity
1	1330046	Hexagonal nail M6*25	16
2	2500488	Up lid (LEFT)	1
3	1310007	Cross nail M4*16	4
4	4100951	Handle	1
5	2500486	Pipe 12.6*103.5	2
6	2500489	Up lid(RIGHT)	1
7	2190152	Connector	2
8	2190149	Silencer	2
9	2500487	Pipe 12.6*133.5	2
10	4200163	O type washer10*2	9
11	4100950	Handle	1
12	4200171	square washer DC900	2
13	2500455	Valve pressor	4
14	2200314	Valve plate 14*50*0.1	4
15	2500454	Middle lid	4
16	2200315	Valve plate 14*50*0.08	8
17	2200316	Washer 10*12*0.6	4
18	1310046	Cross nail M4*88	4
19	4200162	O type washer 63*3	4
20	2130045	gas clinder 69*63.7*24.5	4
21	1360001	Hexagonal screr M6*16	4
22	2500456	Cup plate	4
23	4200165	Cup 48*68*0.08	4
24	2500457	Piston	4
25	1330047	Heagonal Nail M8*20	4
26	1100141	Bearing 6006 RS/SYBS	4
27	1400048	Washer 30*40*2	2
28	2190170	Crank	2
29	2200317	Lock plate	2
30	1340007	Hexagonal nail M8*10	2
31	1310070	Cross nail M4*16	8
32	4100902	Impeller Cover	2
33	1500015	Bearing washer 14	2
34	4100903	Impeller A	1
35	1600029	Hexagonal Scew M5	4
36	2500490	Case body 1	1
37	1100142	Bearing 6203RS/CW	2
38	3110168	stator	1
39	1410061	wssher 5	6
40	1410067	ring 5	6
41	1310073	Cross nail M5*100	2
42	3110169	Rotor	1
43	2500491	Case body 2	1
44	1350043	Hexagonal nail M5*145	4
45	4100904	Impeller B	1
46	4200167	Rubber foot	4
47	2500449	Alu. Case of driver	1
48	3900199	Driver PCB	1
49	1310065	Cross nail M3*10	5
50	3900271	LCD PCB	1
51	1200041	Cross nail ST2.5*8-c	4
52	3210111	3C Cable 3*1*2.6m	1
53	4100905	Cover of driver 1	1