


Exploded View

HK070-R

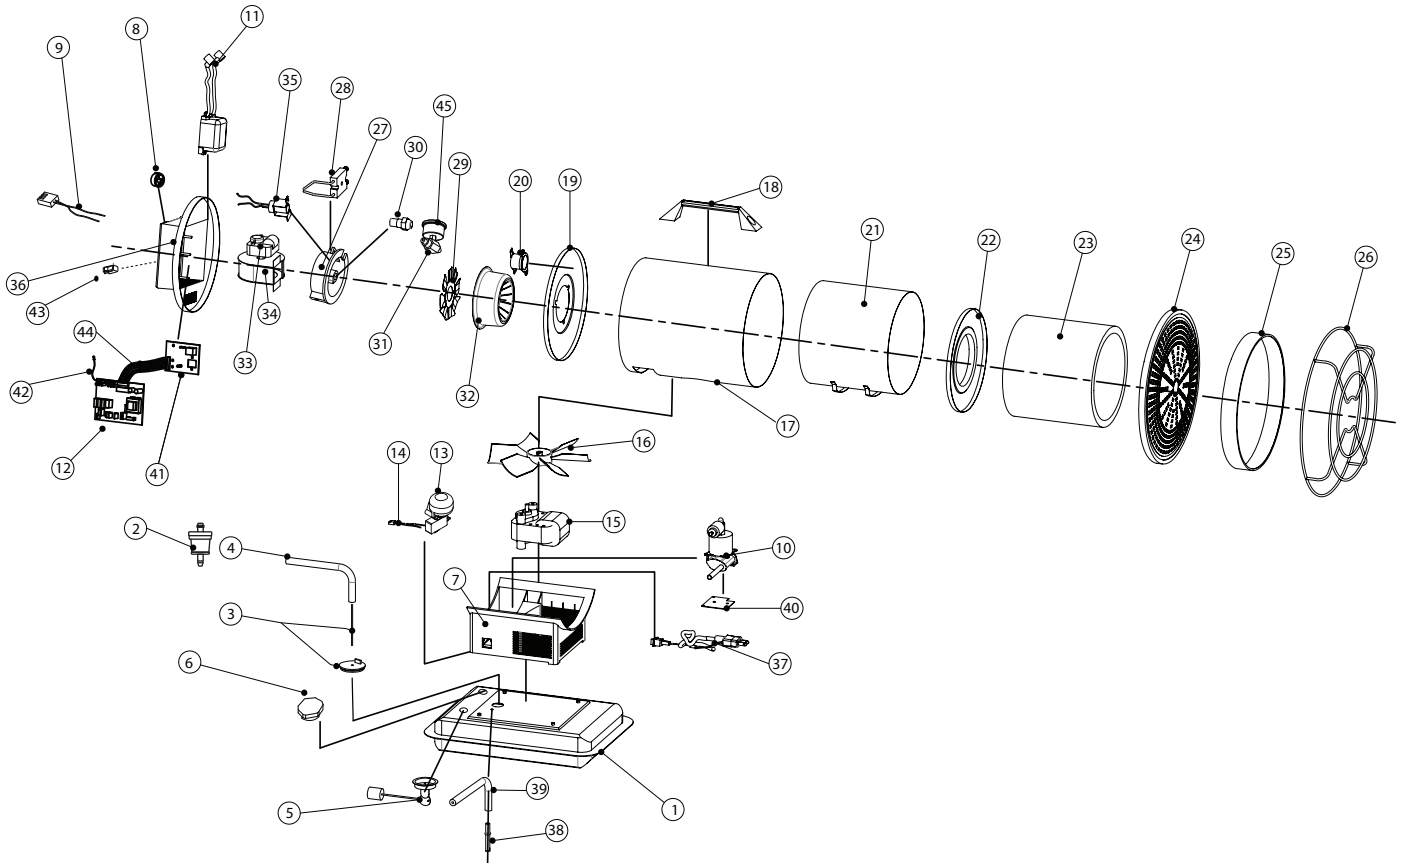

PARTS LIST

#	Part	Previous	Current
1	Fuel Tank Assembly	75-011-0350	01.01.75.007010691
2	Fuel Filter	01.02.75.00702059	GC-00992
3	Fuel Pipe Assembly	75-023-0345	75-024-0725
4	Fuel Hose	75-024-0700	75-024-0700
5	Fuel Gauge	75-022-0210	01.04.75.007010071
6	Fuel Cap (Poly)	70-006-0135	70-006-0140
	Fuel Cap (Metal)		30-120-0010
7	Cooling Fan Housing	N/A	75-011-0685
8	Control Knob	75-012-0110	01.02.75.107020060
9	Power Switch wire Assembly	75-012-0220	01.04.75.007010087
10	Electronic Pump	75-027-0261	01.01.75.207020001
11	Igniter	75-075-0200	01.04.70.104520033
12	Main PCB with Thermostat	75-025-0455	01.04.75.207020002
13	Tip Over Sensor	01.04.75.007010149	50-017-0065
14	Tip over Sensor Wire Assembly	75-051-0260	01.04.75.007010086


PARTS LIST

#	Part	Previous	Current
15	Motor	75-045-0270	01.04.75.607020260
16	Plastic Fan Blade	75-047-0200	01.02.75.007010054
17	Outer Shell	75-011-1110	01.01.75.007020694
18	Handle	75-001-0060	01.02.75.007010055
19	Burner Body Supporter	75-011-1100	01.01.75.007010346
20	Temperature Limit Control	75-040-0110	01.04.75.007020685
21	Chamber Insulator	75-035-0800	01.01.75.007010222
22	Shell Insulator	75-035-0820	01.01.75.007010220
23	Ceramic Fiber	75-035-0830	01.03.75.007010038
24	Heat Plate	75-012-0600	01.01.75.007010690
25	Shell Ring	75-011-0650	01.01.75.007010206
26	Safety Guard	75-012-0310	01.01.75.007010205
27	Burner Body	75-036-0185	01.01.75.007020686
28	Spark Plug	75-075-0200	01.04.75.007010078
29	Burner Blade	75-036-0120	01.01.75.007010700
30	Nozzle	75-036-0435	01.01.75.007020215
31	Gauge Connector	N/A	75-001-0510
32	Diffusion cap	75-036-0500	42-300-0010
33	Blower Motor	75-045-0205	01.04.75.007020155
34 (internal parts)	Blower Housing Air Guide Blower Wheel	N/A	01.01.75.007010347 01.01.75.007010221 01.01.75.007010348
35	Photocell	75-038-0200	01.04.75.007010083
36	Back Cover	75-013-0106	01.02.75.207020001
37	Power Cord	75-032-0185	01.04.75.507020153
38	Return Pipe	75-055-0100	01.01.75.007010204
39	Return Hose	75-055-0100	01.03.75.007010039
40	Pump Bracket	75-027-0255	01.01.75.007010195
41	Display PCB	75-013-0150	01.04.75.107020155
42	Thermistor	75-026-0100	01.04.70.007010019
43	Power Switch	75-012-0100	01.04.75.007010088
44	PCB cable	Connected to Display Board	01.04.75.107020156
45	Pressure Gauge	N/A	70-028-0200
-	Back Panel (not shown)	New in 2017	75-011-0690
-	Pump Connector (not shown)	New in 2017	75-027-0630
-	Inlet Tube Assembly (not shown)	New in 2017	01.01.75.007010219
-	Hose Clamp (not shown)	New in 2017	75-001-0505
-	Breather (not shown)	N/A	GC-00991
-	Cooling fan lead wire extension (not shown)	N/A	01.04.75.007010162
-	Anti-fuel Leak Kit (not shown)	N/A	18-600-0020
-	Pressure Gauge Kit (not shown)	N/A	KT-21
-	Inline Fuel Filter Kit (not shown)	N/A	KT-022

**NEVER LEAVE HEATER UNATTENDED WHILE BURNING OR WHILE
CONNECTED TO A POWER SOURCE**

Exploded View - HK125-RW

▲WARNING ALWAYS contact the manufacturer of this heater before replacing any parts other than those specified or recommended in the servicing instructions.

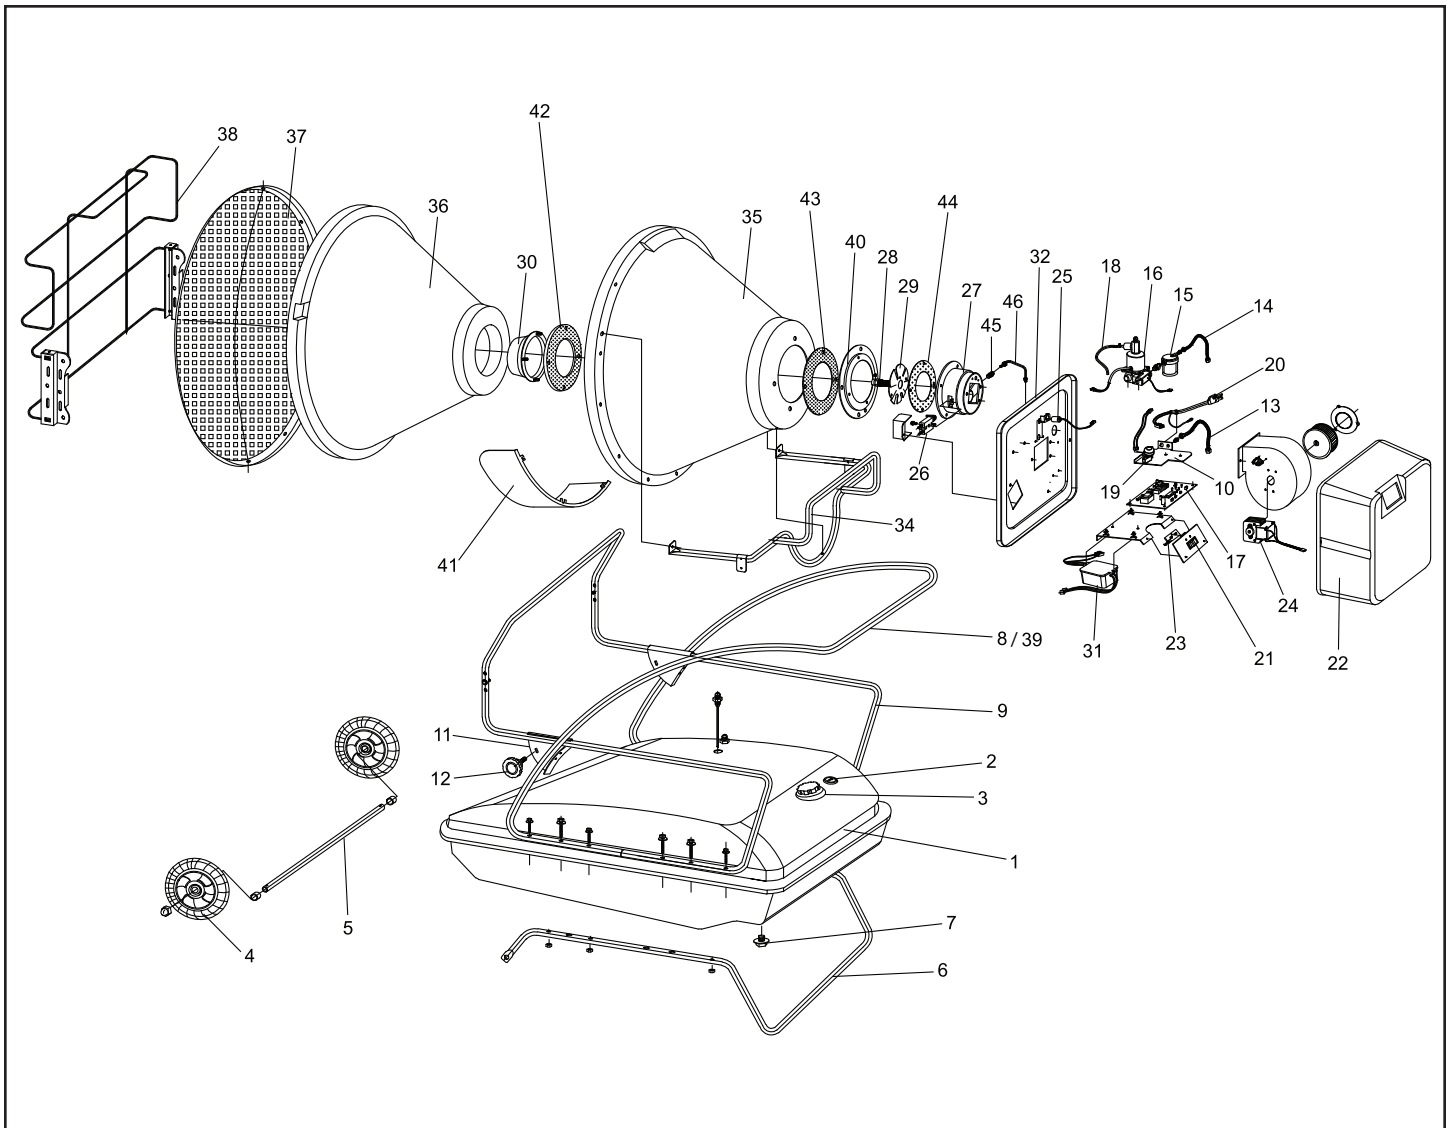

Parts List: HK125-RW

#	Part	Previous	Current
1	Fuel Tank Assembly	72-001-0200	01.01.72.012510632
2	Fuel Gauge Assembly	72-022-0130	01.04.72.012510105
3	Fuel Tank Cap Assembly	72-035-0615	70-006-0140
4	Wheel	72-041-1400	01.03.90.003610031
5	Axle	72-041-0200	01.01.72.012510253
6	Wheel Frame	72-042-0120	01.01.72.012510240
7	Drain Bolt	72-002-0220	01.01.72.012510245
8	Transport Handle	72-042-0220	01.01.72.012510238
9	Rear Frame	72-042-0320	38-110-0030
10	Pump Support Plate	72-025-0510	01.01.72.012510232
11	Frame Support	N/A	N/A
12	Height Adjustment Knob	72-042-0500	01.02.72.012510064
13	Return Fuel Line	72-023-0260	01.03.72.012510050
14	Intake Fuel Line	72-023-0260	01.03.72.012510050
15	Fuel Filter Assembly	72-020-0100	01.02.72.012510062
16	Fuel Pump Assembly	72-027-0100	01.01.72.312520263
17	Main PCB and Fuse	72-025-0450	01.04.72.012520685
18	Intake Fuel Hose	72-023-0310	01.03.72.012510050
19	Tip Over Sensor	75-051-0200 / 01.04.75.007010149	50-017-0065
20	Power Cord	72-032-0200	01.04.72.412520247
21	Power Switch	72-012-0100	01.04.72.312520120
22	Back Cover	72-013-0110	01.02.72.012510061
23	Panel sub-PCB	72-014-0105	01.04.72.012510107
24	Blower Motor Assembly	72-045-0100	01.04.72.312520116
24 (internal parts)	Blower Housing Blower Wheel Air Guide	N/A	01.01.72.012510230 01.01.72.012510251 01.0172.012510333
25	Photocell Assembly	72-038-0200	01.04.75.007010083
26	Spark Plug	75-075-0200	01.04.75.007010078
27	Burner Body	72-035-0210	01.01.72.012510250
28	Nozzle	72-036-0100	01.01.72.312520264
29	Burner Blade	72-035-0500	01.01.72.012510635
30	Diffusion Cap	72-036-0200	01.01.72.012510248
31	Ignitor	72-025-0120	01.04.70.104520033
32	Burner Support Plate	72-035-0110	01.01.72.012510331
33	Temperature Overheat Sensor (not shown)	72-040-0120	01.04.72.012510104
34	Radiant Cone Support Assembly	72-035-0680	01.01.72.012510237
35	Radiant Cone Assembly	72-035-0610	01.01.72.012510246
36	Ceramic Fiber	72-035-0610	01.03.72.012510043
37	Heat Plate	72-012-0200	01.09.75.007010002
38	Safety Guard	72-012-0200	01.01.72.012510242
39	Front Frame	72-042-0220	01.01.72.012510238
40	Burner Bracket	72-035-0700	01.01.72.012510234
41	Radiant Visor	72-012-0220	01.01.72.012510225
42	Burner Housing Gasket	72-035-0630	01.03.72.012510046
43	Burner Bracket Gasket	72-035-0630	01.03.72.012510045
44	Burner Head Gasket	72-035-0215	01.03.72.012510047
45	Fuel Pipe Nipple	-	01.01.72.012510260
46	Fuel Pump Inlet Pipe	-	01.01.72.012510256