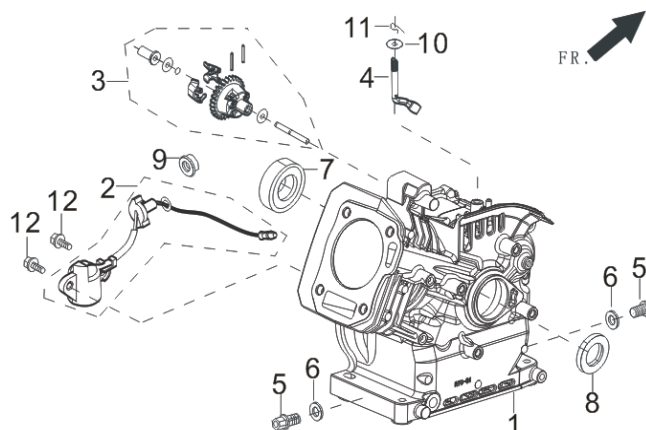
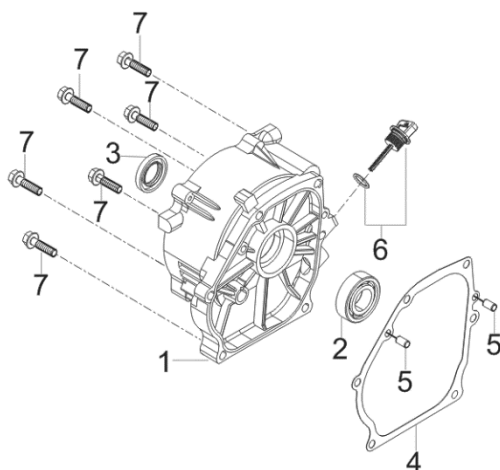
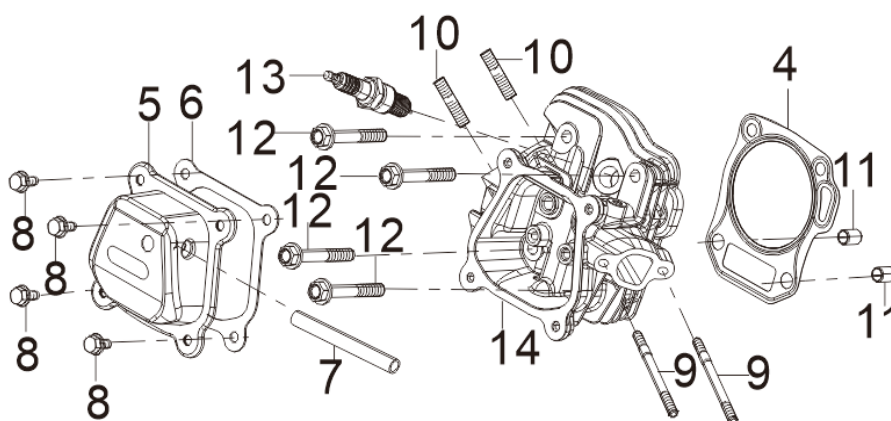


FIG.1 CRANKCASE. / GEAR ASSY, GOVERNOR. (E01)

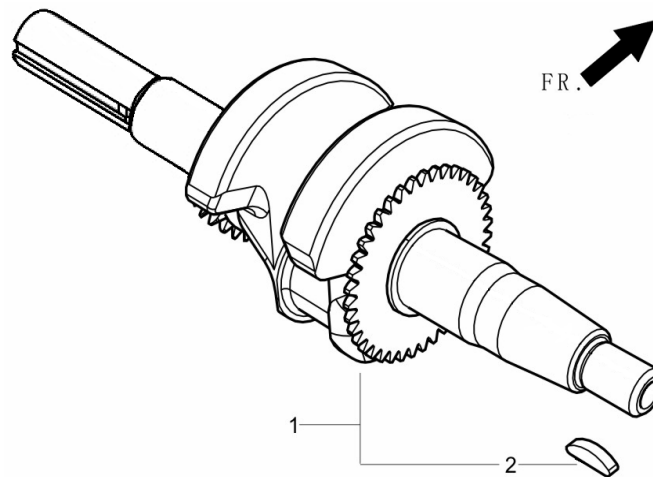
REF.NO.	PART NO.	DESCRIPTION	Q'TY
E01-1	11310-Z531010-00A9	CRANKCASE SUBASSEMBLY.	1
E01-2	37060-Z010120-0000	SENSOR, ENGINE OIL	1
E01-3	16400-Z0X0110-00A0	GEAR ASSY, GOVERNOR	1
E01-4	16061-Z010110-00A0	ARM, GOVERNOR	1
E01-5	11007-Z010110-00A0	BOLT, DRAIN PLUG	2
E01-6	90408-Z010110-00A0	WASHER, FLAT	2
E01-7	90547-0205-CLA0	DEEP GROOVE BALL BEARING	1
E01-8	90682-Z300110-00A0	SEAL, OIL	1
E01-9	90305-Z010210-01A0	HEXAGON NUT WITH FLANGE	1
E01-10	90408-Z010210-00A0	WASHER, FLAT	1
E01-11	90501-Z010110-0000	COTTER PIN	1
E01-12	90001-0614-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	2

FIG.2 COVER SUBASSEMBLY, CRANKCASE (E02)

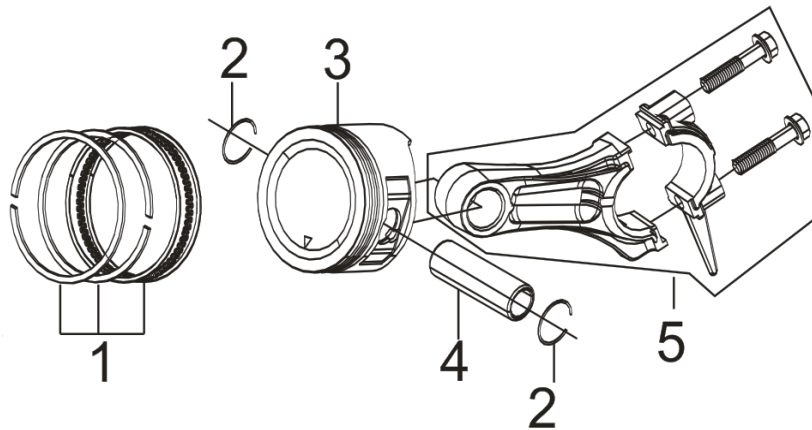
REF.NO.	PART NO.	DESCRIPTION	Q'TY
E02-1	11411-Z530111-00A0	COVER, CRANKCASE	1
E02-2	90547-0205-CLA0	DEEP GROOVE BALL BEARING	1
E02-3	90682-Z300110-00A0	SEAL, OIL	1
E02-4	11001-Z440110-00A0	GASKET, CRANKCASE	1
E02-5	90502-0912-00A0	POSITION PIN - TYPE A	2
E02-6	15010-Z010130-Q500	DIPSTICK SUBASSEMBLY, OIL	1
E02-7	90001-0832-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	6

FIG.3 HEAD SUBASSEMBLY, CYLINDER / PLUG, SPARK (E03)

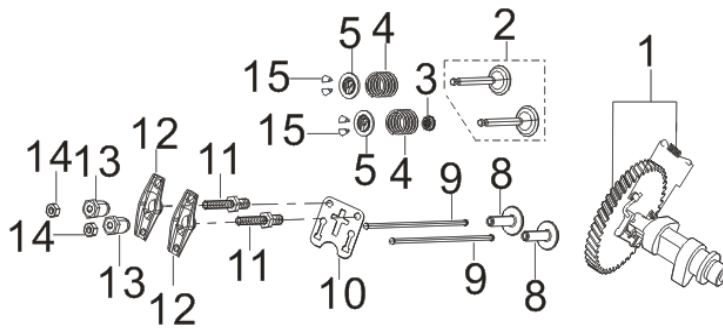
REF.NO.	PART NO.	DESCRIPTION	Q'TY
E03-4	12131-Z950110-0000	GASKET, CYLINDER HEAD	1
E03-5	12410-Z010220-H700	COVER SUBASSEMBLY, CYLINDER HEAD	1
E03-6	12004-Z010110-0000	CYLINDER HEAD COVER GASKET	1
E03-7	17004-Z430110-00A0	TUBE, BREATHER	1
E03-8	90001-0612-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	4
E03-9	90204-Z010210-0000	STUD BOLT	2
E03-10	90203-Z010110-0000	STUD BOLT	2
E03-11	90502-1114-00A0	POSITION PIN - TYPE A	2
E03-12	12003-Z010110-00A0	CYLINDER HEAD BOLT	4
E03-13	30010-Z010110-00A0	PLUG, SPARK	1
E03-14	12140-Z810210-00A0	HEAD SUBASSEMBLY, CYLINDER	1

FIG.4 ROD,CRANKSHAFT CONNETING (E04)

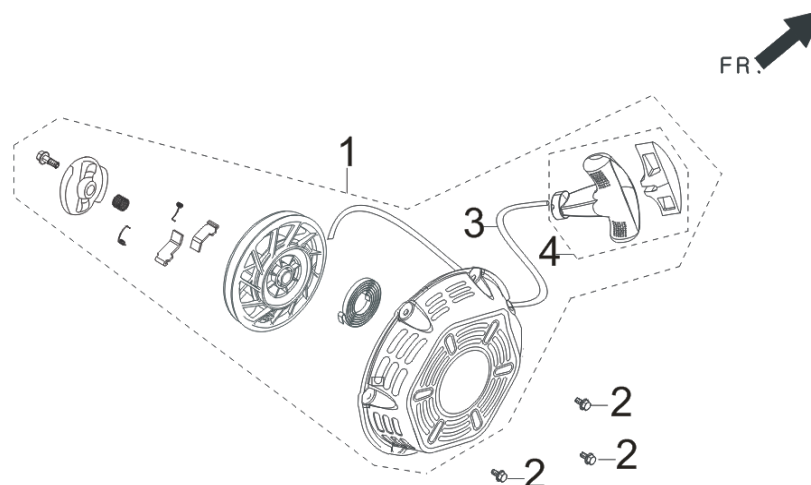
REF.NO.	PART NO.	DESCRIPTION	Q'TY
E04-1	13300-Z530410-00A1	CRANKSHAFT ASSY.	1

FIG.5 RING SET,OIL / ROD,CRANKSHAFT CONNETING (E05)

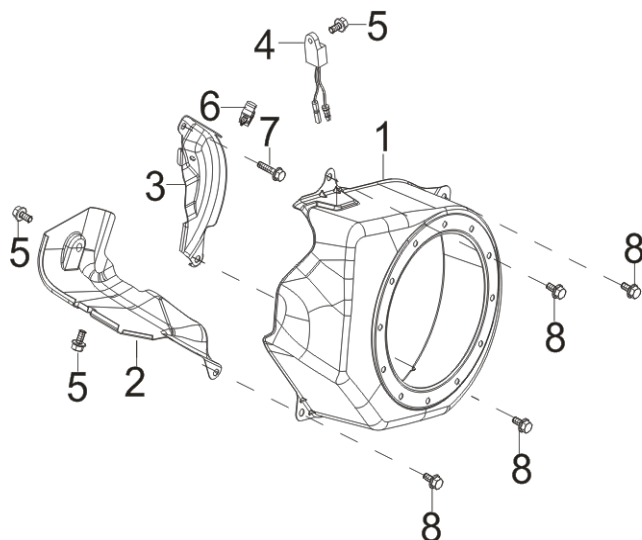
REF.NO.	PART NO.	DESCRIPTION	Q'TY
E05-1	13200-Z140210-00A9	RING ASSY, PISTON	1
E05-2	13122-Z010110-00A0	CLIP, PISTON PIN	2
E05-3	13111-Z140220-00A9	PISTON	1
E05-4	13121-Z010110-00A0	PIN, PISTON	1
E05-5	13010-Z440210-00A9	ROD, CONNECTING	1

FIG.6 TRAIN,VALVE / CAMSHAFT SUBASSEMBLY (E06)

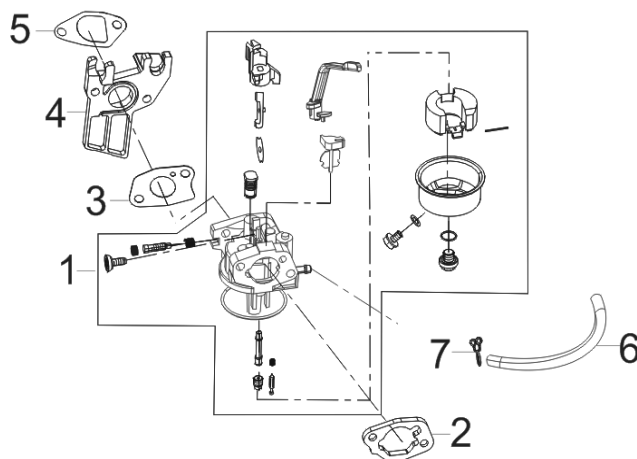
REF.NO.	PART NO.	DESCRIPTION	Q'TY
E06-1	14200-Z530210-00A9	CAMSHAFT ASSY.	1
E06-2	12110-Z810120-00A9	VALVES SET	1
E06-3	12101-Z810210-00A0	GUIDE, SEAL	1
E06-4	12103-Z010110-00A0	SPRING, VALVE	2
E06-5	12112-Z810210-00A0	SEAT, VALVE SPRING	2
E06-8	14081-Z040110-00A0	TAPPET, VALVE	2
E06-9	14071-Z440110-00A0	LIFTER, VALVE	2
E06-10	14090-Z010110-00A0	PLATE SUBASSEMBLY, LIFTER STOPPER	1
E06-11	14313-Z010110-00A0	ROCKSHAFT BOLT	2
E06-12	14311-Z010110-00A0	ROCKER, VALVE	2
E06-13	14314-Z010110-00A0	NUT, VALVE ADJUSTING	2
E06-14	14312-Z010110-00A0	NUT, VALVE LOCK	2
E06-15	12109-Z810110-00A0	CLAMP, VALVE LOCK	4

FIG.7 STARTER,RECOIL (E07)

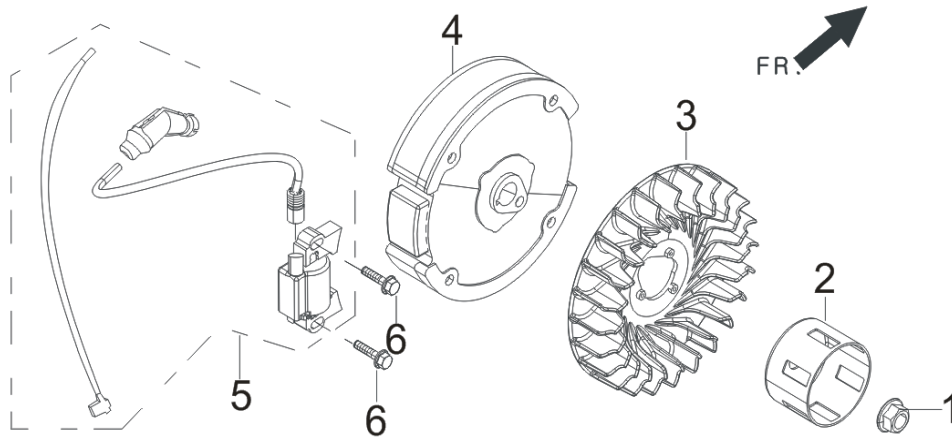
REF.NO.	PART NO.	DESCRIPTION	Q'TY
E07-1	28200-Z300110-H700	STARTER ASSY, RECOIL	1
E07-2	90001-0608-01	BOLT	3

FIG.8 SHROUD / SHIELD,LOWER (E08)

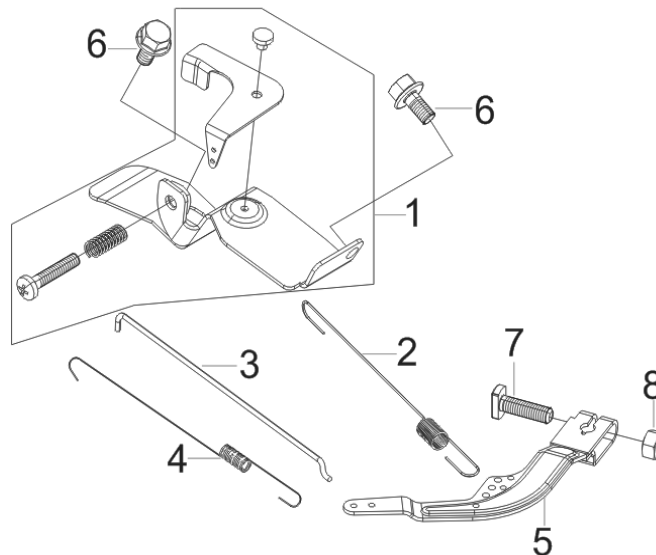
REF.NO.	PART NO.	DESCRIPTION	Q'TY
E08-1	28110-Z010410-GJ00	SHROUD	1
E08-2	19304-Z010610-0000	SHROUD, CYLINDER BODY	1
E08-3	19340-Z011011-0000	SHIELD,LOWER	1
E08-4	37050-Z010310-0000	PROTECTOR, OIL	1
E08-5	90001-0610-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	3
E08-6	90740-Z010110-00A0	COLLAR	1
E08-7	90001-0616-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	1
E08-8	90001-0612-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	4

FIG.9 CARBURETOR ASSY. (E09)

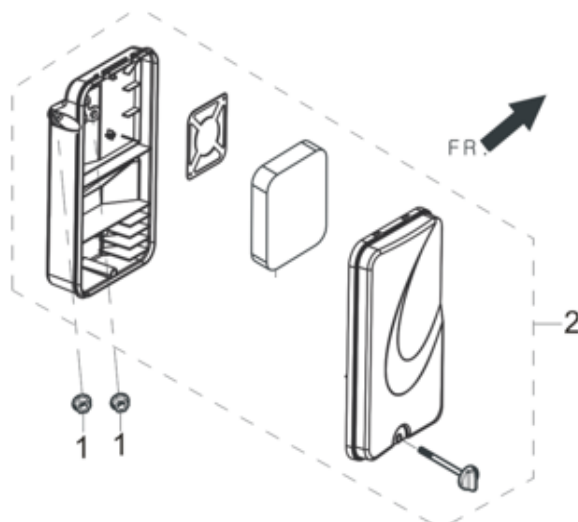
REF.NO.	PART NO.	DESCRIPTION	Q'TY
E09-1	16100-Z530710-0099	CARBURETOR ASSY.	1
E09-2	17001-Z010110-0000	AIR CLEANER SEAL GASKET	1
E09-3	16001-Z010110-0000	CARBURETOR SEAL GASKET	1
E09-4	16003-Z010110-00A0	PLATE, CARBURETOR INSULATOR	1
E09-5	16002-Z050110-0000	GASKET, CARBURETOR INSULATOR	1
E09-6	90686-Z010810-00M1	TUBE, FUEL	1
E09-7	90685-D075-0EA0	PIPE CLAMP	1

FIG.10 FLYWHEEL / IMPELLER / STARTER PULLEY / IGNITION COIL (E10)

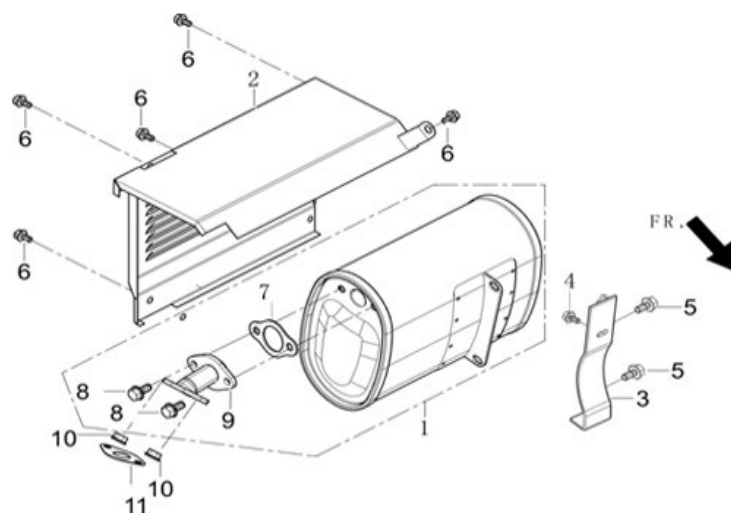
REF.NO.	PART NO.	DESCRIPTION	Q'TY
E10-1	13501-Z010110-00A0	NUT, FLYWHEEL	1
E10-2	28002-Z010310-0000	PULLEY, STARTER	1
E10-3	19352-Z440110-00A0	IMPELLER	1
E10-4	13510-Z440410-00A0	FLYWHEEL SUBASSEMBLY	1
E10-5	30400-Z440410-0000	COIL, IGNITION	1
E10-6	90001-0625-01A0	BOLT	2

FIG.11 CONTROL ASSY, THROTTLE (E11)

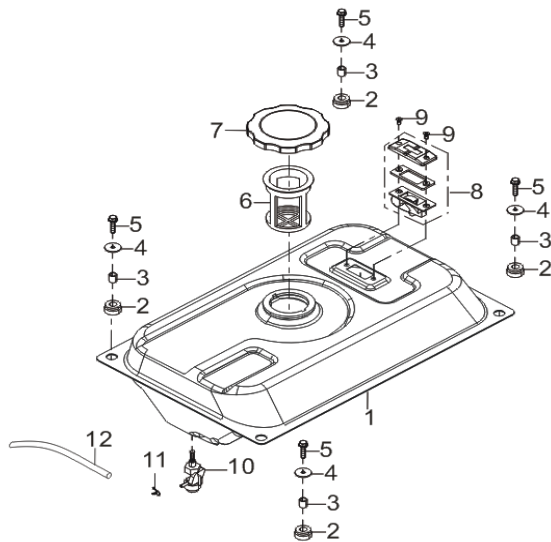
REF.NO.	PART NO.	DESCRIPTION	Q'TY
E11-1	16520-Z040130-0000	CONTROL ASSY, THROTTLE	1
E11-2	16063-Z010210-00A0	SPRING, GOVERNOR	1
E11-3	16062-Z010210-00A0	ROD, GOVERNOR	1
E11-4	16012-Z010110-00A0	SPRING, THROTTLE VALVE RETURNING	1
E11-5	16070-Z010110-00A0	GOVERNOR BRACKET SUBASSEMBLY	1
E11-6	90001-0610-01A0	BOLT	2
E11-7	16072-Z010110-00A0	BOLT, GOVERNOR SUPPORT	1
E11-8	90305-0600-31A0	HEXAGON NUT WITH FLANGE	1

FIG.12 CLEANER, AIR (F01)

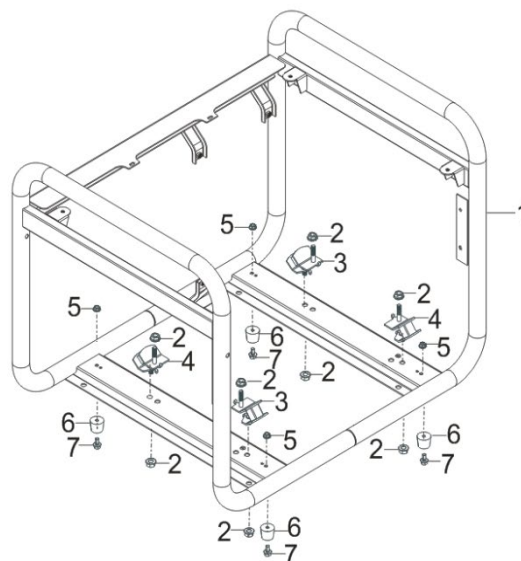
REF.NO.	PART NO.	DESCRIPTION	Q'TY
F01-1	90305-0600-31A0	HEXAGON NUT WITH FLANGE	2
F01-2	17100-Z300810-0001	AIR CLEANER	1

FIG.13 MUFFLER ASSY. (F02)

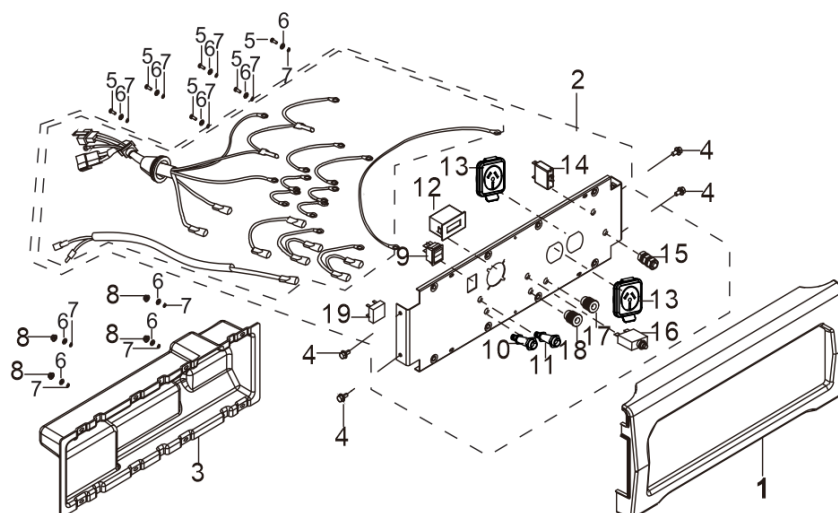
REF.NO.	PART NO.	DESCRIPTION	Q'TY
F02-1	18100-Y040520-00A0	MUFFLER ASSY.	1
F02-2	18130-Y020110-H700	MUFFLER OUTER COVER	1
F02-3	18030-Y020110-H700	BRACKET,MUFFLER	1
F02-4	90001-0612-01A0	BOLT	1
F02-5	90001-0816-03	BOLT	2
F02-6	90007-0612-A3	BOLT	5
F02-10	90303-0800-33	HEXAGON NUT	2
F02-11	18001-Z010110-00A0	GASKET, EXHAUST OUTLET	2

FIG.14 TANK ASSY, FUEL (F03)

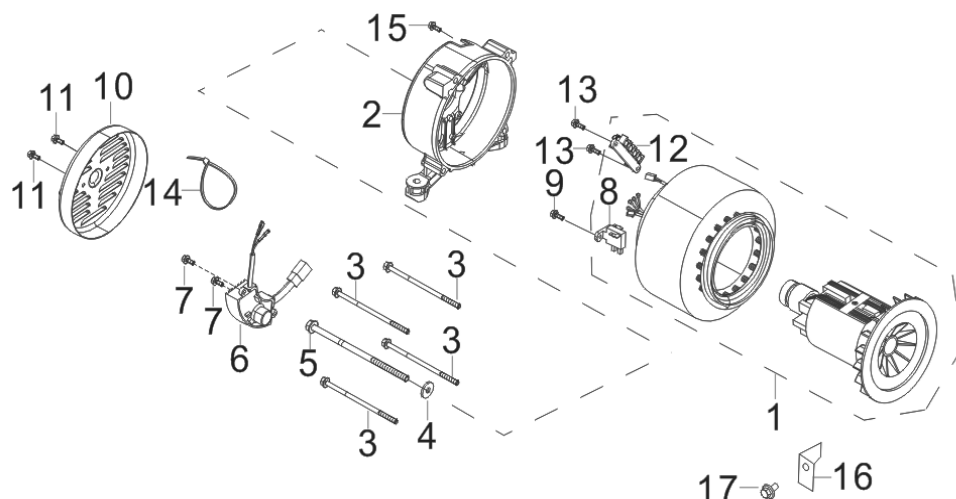
REF.NO.	PART NO.	DESCRIPTION	Q'TY
F03-1	16620-Y020320-GJ00	FUEL TANK	1
F03-2	16601-Y020120-0000	SLEEVE, FUEL TANK RUBBER	4
F03-3	90683-Y020110-0000	BUSH	4
F03-4	90408-Y020110-0000	FLAT WASHER	4
F03-5	90007-0625-A3	BOLT	4
F03-6	16652-Y020120-00A0	STRAINER, FUEL	1
F03-7	16730-Y020130-H7A0	COVER, FUEL TANK	1
F03-8	37200-Y020120-H7A0	LEVELER ASSY, OIL	1
F03-9	90104-0512-53	BOLT	2
F03-10	16750-Y020211-0000	COCK ASSY, FUEL	1
F03-11	90740-Z010210-0000	COLLAR	1
F03-12	30431-Y020110-0000	JACKET, RUBBER	1

FIG.15 FRAME, ENGINE (F04)

REF.NO.	PART NO.	DESCRIPTION	Q'TY
F04-1	51100-Y040320-H7A0	FRAME ASSY, ENGINE	1
F04-2	90305-0800-31A0	HEXAGON NUT WITH FLANGE	8
F04-3	51005HY020120-0000	CUSHION, ENGINE FRAME	2
F04-4	51011HY020120-0000	CUSHION, ENGINE FRAME RIGHT	2
F04-5	90327-0600-31A0	HEXAGON NUT WITH FLANGE	4
F04-6	51014HY020120-0000	SEAT, ENGINE FRAME SHOCK ABSORPTION	4
F04-7	90001-0612-03	BOLT	4

FIG.16 PANEL SUBASSEMBLY, CONTROL (F05)

REF.NO.	PART NO.	DESCRIPTION	Q'TY
F05-1	35680-Y020120-Q2A0	SEAT, PANEL	1
F05-2	35610-Y049410-H700	PANEL SUBASSEMBLY, CONTROL	1
F05-3	35601-Y130130-Q200	CASE, PANEL REAR	1
F05-4	90007-0612-A3	BOLT	4
F05-5	90106-0410-51A0	CROSS-RECESSED SMALL PAN HEAD SCREW	6
F05-6	90403-0400-01A0	WASHER, FLAT	6
F05-7	90408-0400-E1A0	FLAT WASHER	6
F05-8	90305-0400-71A0	HEXAGON NUT WITH FLANGE	4
F05-9	35160-Y020110-0000	SWITCH SUBASSEMBLY	1
F05-10	35612-Y030110-0000	POWER INDICATOR	1
F05-11	37018-Y900110-0000	OIL ALARM INDICATOR	1
F05-12	35632-Y130110-0000	TIMER	1
F05-13	35614-Y020510-0000	SOCKET SUBASSEMBLY, POWER SUPPLY	2
F05-14	35645-Y060110-0000	BREAKER, SINGLE-POLE CIRCUIT	1
F05-15	35629-Y090110-0000	TERMINAL SUBASSEMBLY, GROUNDING	1
F05-16	31234-Y9H0110-0000	PROTECTOR, OVERCURRENT	1
F05-17	35634-Y020110-0000	TERMINAL, NEGATIVE ELECTRODE	1
F05-18	35633-Y020110-0000	TERMINAL, POSITIVE ELECTRODE	1
F05-19	35621-Y020110-0000	BRIDGE, RECTIFICATION	1

FIG.17 ROTOR/STATOR (F06)

REF.NO.	PART NO.	DESCRIPTION	Q'TY
F06-1	31300-Y041210-0000	MOTOR ASSY.	1
F06-2	30021-Y020310-00A0	MOTOR SUPPORT	1
F06-3	30048-Y040120-00A0	STATOR BOLT	4
F06-4	90408-Y020210-00A0	FLAT WASHER	1
F06-5	30049-Y040120-00A0	BOLT, ROTOR	1
F06-6	30060-Y025110-0000	REGULATOR, VOLTAGE	1
F06-7	90001-0512-03	BOLT	2
F06-8	31320-Y020120-0000	BRUSH SUBASSEMBLY, CARBON	1
F06-9	90001-0512-01A0	BOLT	1
F06-10	30022-Y020110-GJ00	MOTOR TAIL COVER	1
F06-11	90001-0512-01A0	BOLT	2
F06-12	31303HY020110-0000	BLOCK, TERMINAL	1
F06-13	90001-0512-01A0	BOLT	2
F06-14	90727-Y040110-00A1	BAND	1
F06-15	90001-0512-01A0	BOLT	1
F06-16	30023-Y020110-0000	STOPPER, MOTOR RIGHT COVER	1
F06-17	90007-0612-A1A0	BOLT	1