



Kit Assembly Guide

Please follow the steps below to correctly assemble your kit -

- 1. Mount **ITEM 3** to the base being used.
 - 2. Place **ITEM 1** in position and align the slotted holes.
 - 3. Insert **ITEM 8** through the slotted holes (inserting through the large holes and sliding across to fit with the small holes).
 - 4. Insert **ITEM 9b** to **ITEM 8**.
 - 5. Lock **ITEM 8** in position to **ITEM 2** (captive nuts on the outside) screwing until **ITEM 9b** touches the wall inside.
 - 6. Insert **ITEM 9a** to **ITEM 7**.
 - 7. Insert **ITEM 7** through the small holes and lock in position to **ITEM 2** (captive nuts on the inside).
 - 8. Insert **ITEM 5** to **ITEM 6**.
 - 9. Adjust **ITEM 1** by sliding it according to your need.
 - 10. Insert **ITEM 6** through **ITEM 4** until it touches the welded metal piece on **ITEM 1** to lock it in position.
 - 11. Tighten all the bolts and screws.
 - 12. Now that the kit is ready and unable to move, mount your pump to **ITEM 1** in alignment with the top holes as shown below.
- (NOTE: Loosen the bolts and screws to slide **ITEM 1** accordingly if further adjustment needed.)

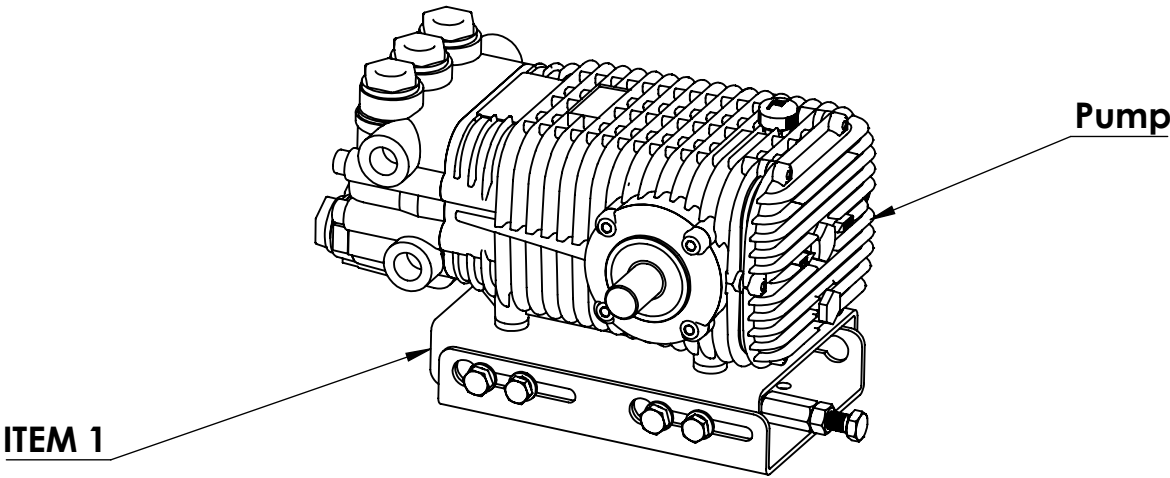

UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS SURFACE FINISH: TOLERANCES: LINEAR: ANGULAR:				FINISH:		DEBURR AND BREAK SHARP EDGES		<div></div> B.A.R. Group P/L		
	NAME		SIGNATURE		DATE		REVISIONS		PART NO. / PRODUCT	
DRAWN	Kishwar A				28/01/22		12/10/22		<div>125 85.804.043</div> <div>Slide Rail to suit HYD Kits</div>	
CHK'D	Dominic R									
APP'VD	Daryl B									
MFG										
Q.A									<div>DESCRIPTION</div> <div>Kit assembly guide</div> <div>A3</div>	
</										